
FISHVUE LIME

Installation Manual

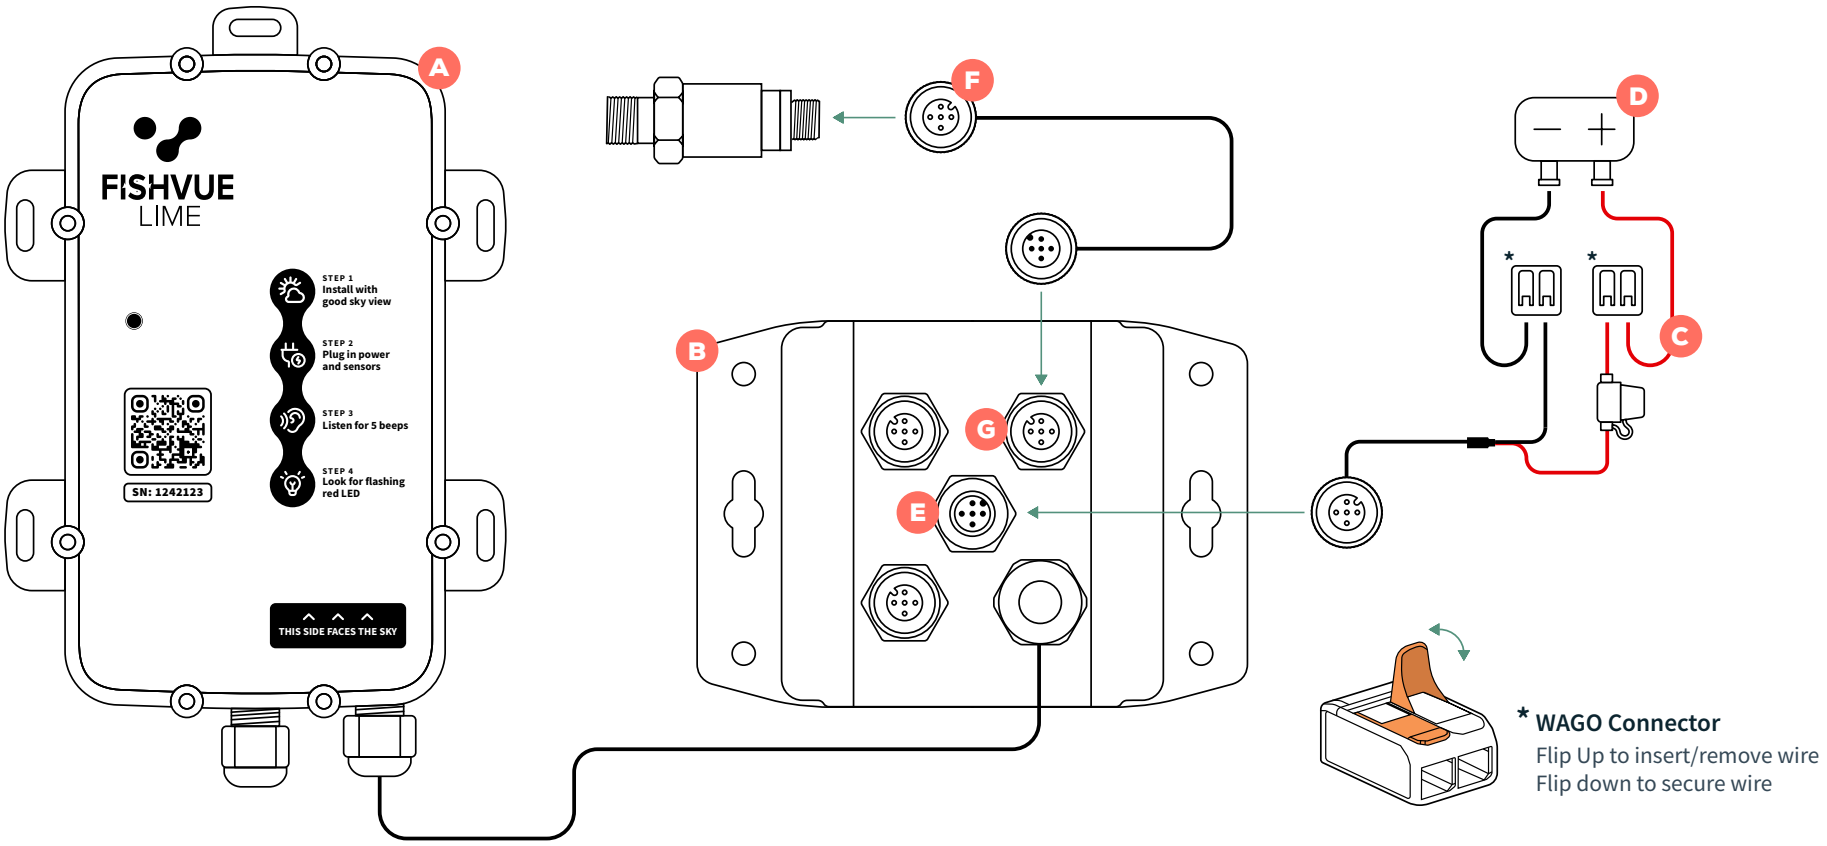

1. Mount the LIME unit (A) and junction box (B) with clear sky view and away from large electronics (screws/fasteners not supplied).
2. Connect the fused end of the power cable (C) to your vessel power supply (D) (12v or 24v DC terminal). Attach additional wire to the WAGO connector as needed. Remove WAGO connectors if desired.
3. Connect the M12-A female connector end of the power cable to the Power port (E) in center of junction box. Hand tighten the connection nut.
4. Install your pressure sensor in the high-pressure supply line of your hydraulic system.
   For more details refer to refer to: **pressures sensor install guide**
5. Connect the M12-A female end of the sensor cable (F) to the top of the pressure sensor and the M12-A male end of the sensor cable to the Analog Pressure port (G) on the connection box. Hand tighten the connection nuts.